



# Olympus Tough TG-1 Backplate Replacement

Camera has been dropped making the camera no longer weather proof.

Written By: Grant Lee





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Clip Side Repair



- Remove both .6 cm screws from the clip side of the camera. If one of more of the clips appear to be broken the back plate might need to be replaced.

## Step 2 — Battery



- Locate compartment door on bottom of the camera.
- The battery compartment has two latches to prevent the cell from falling out. First, slide the latch labeled **LOCK**. Then, slide the bigger latch toward the symbol that resembles pacman.



## Step 3



- Open compartment door. Remove battery.

⚠ Batteries contain highly acidic contents. If yours has leaked or ruptured while inside the compartment, there may be damage to the camera's circuitry. Clean out any residue using latex gloves and tissues.

ⓘ For loose compartment doors, check the hinge or the locking pieces under the rubber pad (simply unscrew and remove the rubber and metal plate).

## Step 4 — Top of Camera



- The top of the camera has no screws making it easy to disassemble.

## Step 5 — Plug Side



- Begin by removing the two .5 cm screws on plug side of camera. Once complete open compartment door and remove both .6 cm screws.

## Step 6 — Bottom



- Remove .4 cm screws from bottom of the camera.

## Step 7 — Front Panel



- Use plastic opening tool to remove both components of the front panel.
- ⓘ Once every screw and panel is removed you can now replace your backplate to make your camera weatherproof once again.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 03:15:30 PM.